



 
Ciseaux




Lubrifiant




Brosse

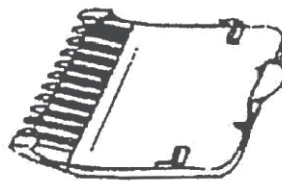


3mm

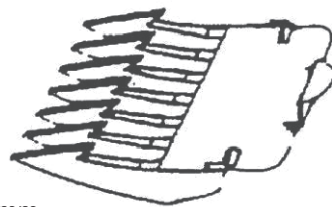

6mm

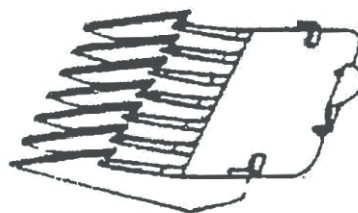

9 mm

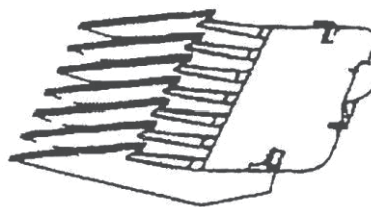


12mm

**AnimoM**alins  
Le choix malin à prix câlins

## TONDEUSE ANIMAUX


### MODE D'EMPOI

Réf. : 6211  
Réf. fabricant : GTS-2800  
Numero de lot : 20151991

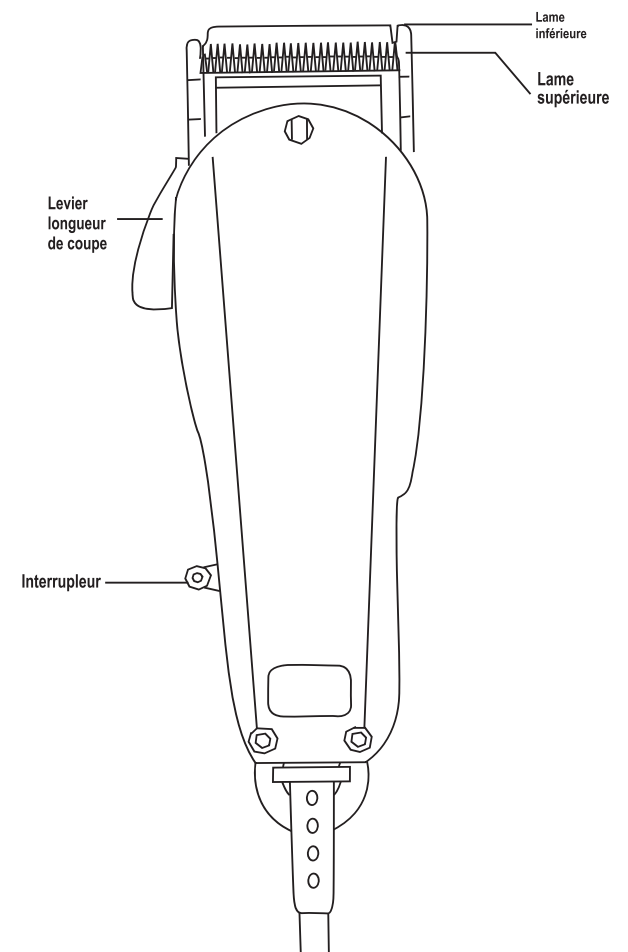


### ALIGNEMENT DES LAMES

Il est possible que les lames ne soient plus alignées quand vous voulez utiliser votre tondeuse. Il faut que l'extrémité des dents de la lame supérieure soit à environ 0.5mm en arrière de l'extrémité des dents de la lame inférieure. Vérifiez également que l'alignement des lames est identique au schéma ci-contre.

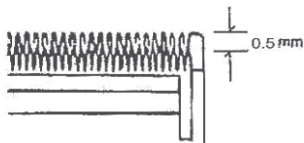


Si l'alignement est incorrect, mettre quelques gouttes d'huile sur les lames, faire fonctionner la tondeuse quelques instants, puis desserrer les deux vis pour ajuster la lame inférieure. Bien resserrer les vis quand les lames sont alignées.

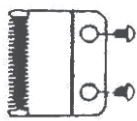

### LUBRIFICATION

Avant toute utilisation, il faut huiler les lames comme indiqué sur le dessin ci-contre. Utiliser une huile pour machine à coudre, pour armes ou de préférence l'huile livrée avec la tondeuse.


Gardez cette huile hors de portée des enfants. En cas d'ingestion, ne pas faire vomir mais appeler un médecin d'urgence.

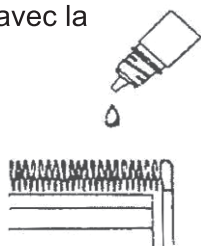

### LEVIER DE LONGUEUR DE COUPE

Votre tondeuse est équipée d'un levier pour ajuster la longueur de coupe pendant la coupe. Pour augmenter la longueur de coupe, appuyer sur le levier et pour la réduire ramener le levier avec le pouce.

Vous pouvez également vous servir de ce levier lorsqu'il y a beaucoup de poils dans les lames. Avec la tondeuse en marche relever et rabaisser le levier 2 ou 3 fois pour faire tomber les poils coincés.

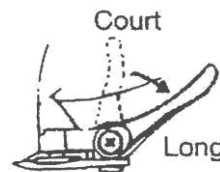

### PRÉCAUTIONS IMPORTANTES

Ne pas mettre en marche si :

- ▣ l'appareil présente des dommages visibles (lames cassées par exemple).

- ▣ le cordon électrique est abimé.

- ▣ après une chute de l'appareil.

Débrancher l'appareil :

- ▣ avant chaque nettoyage et entretien.

- ▣ en cas d'anomalie durant l'utilisation.

- ▣ après utilisation.

Ne jamais plonger l'appareil dans l'eau ou autres liquides.

Ne pas utiliser à proximité d'un point d'eau ou d'une source de chaleur importante.

Ne pas tirer sur le fil électrique.

Ne pas poser l'appareil en marche.

Ne pas laisser des enfants ou des personnes âgées utiliser l'appareil sans supervision.

Vérifier que le voltage utilisé corresponde bien à celui indiqué sur l'appareil.

Votre tondeuse est destinée à un usage personnel.

### IMPORTANT

EN CAS DE REMPLACEMENT DU CORDON, UTILISER UN CABLE PVC DE TYPE H05VVH2-F 2 X 0.75mm2

### GUIDES DE COUPE

Court	3 mm
Moyen court	6 mm
Moyen long	9 mm
Long	12 mm

Chaque guide est marqué avec sa taille.


Pour placer un guide de coupe sur la tondeuse, le glisser sur la tête de la tondeuse et appuyer jusqu'au bout.

Pour retirer un guide de coupe, tirer simplement sur la languette située à sa base.

# AnimoM<sup>al</sup>ins

Le choix malin à prix câlins

## DOG GROOMING KIT USER MANUAL

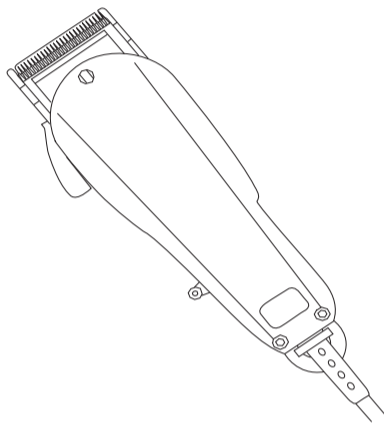

Refer to the details of this direction before use

### Danger

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not use outdoors.
4. Do not place or store the product where it can fall or be pulled into a tub or sing. Do not place in or drop into water or other liquid.
5. Unplug the product before cleaning.



### Warning

To reduce the risk of burns, fire, electric shock, or injury to the user:

1. Never left unattended the product when plugged in.
2. Close supervision is necessary when the product is used by, on or near children or invalids.
3. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Do not carry this product by the supply cord nor use the cord as a handle.
5. Never use this product if it has a damaged cord or plug. If it is not working properly, if it has been dropped or damaged, or drop into water, return the product to a professional for examination and repair.
6. Make sure the cord is not twisted or has kinks.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered. Do not use clipper germicide cleaners containing phenyl phenol.
8. Do not use this product with damaged or broken blades.

## INSTRUCTIONS FOR ALIGNING BLADES ON THE CLIPPER


Sketch shows how the bottom blade holes are larger than the shanks of the blades screws. When the blade screws are loosened, the bottom blade can be aligned with the top blade. Retighten the blade after it has been aligned.

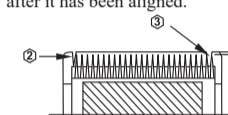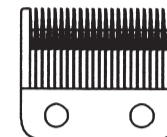

1. End of the top blade teeth should be 1/32" to 1/16", 0.79mm to 1.59mm back from bottom blade. This is important so that the clipper doesn't cut too close or allow the moving cutter to touch the skin.
2. Extreme left hand tooth of top blade must be covering or be to the left of the first small tooth of bottom blade.
3. Extreme right hand tooth of top blade must be touching the big tooth on the bottom blade


### TAPER LEVER

Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut. When the lever is in the uppermost position, the blades will give the closest cut. Pushing the lever downward gradually increases the cutting length.

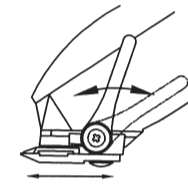


## POWER SCREW

To adjust power, turn the power screw in clockwise direction until you hear a noise. Then, slowly turn the power screw out (counter-clockwise) just until the noise stops. This is maximum power. The clattering when turning the machine on or off is no consequences ; it occurs when moderate heating and vibration.

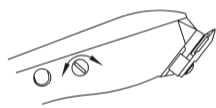

**OIL** (Do not attempt to adjust this clipper before oiling.)

The blades of your new clipper should be oiled every few haircuts. Simply place a few drops of oil on the teeth of the blades. Use only the oil included in the pack. Due to the high speed of your clipper, the correct type of oil must be used. Do not use hair oil, grease or any oil mixed with kerosene or any solvent as the solvent will evaporate and leave the thick oil, slowing down the blades. The clipper Oil is a very thin, natural oil which will not evaporate and will not slow down the blades.

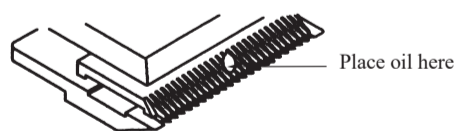

## Maintenance & Service

1. Before repair and maintenance, please pull out the plug and separate the device from the power supply.
2. When maintaining and cleaning, set the switch of electric clippers to the "OFF" position.
3. Clear off the hair bits on the cutter head with a cleaning brush.
4. Add lube drops to the friction part of the movable and fixed blades of the cutter head.
5. Run the electric clippers for 5 seconds to make the lube spread out.
6. Wipe the device clean with a soft cloth and store in the packing box.
7. Keep it in dry and cool places.
8. If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid hazard.

### Warning

This product is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledges, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety. Children should be supervised to ensure that they won't play with the product. The product is reserved for trimming purposes only. If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid hazard.

